

# Wiring diagram Dosistar V

## Hardware Version 3.7



With Passion and  
Precision

IML Electronic GmbH  
Erich-Schlesinger-Straße 49D  
18059 Rostock | Germany

Telefon: +49 0381 – 49681440


E-Mail: [contact@iml-electronic.de](mailto:contact@iml-electronic.de)  
Web: [www.iml-electronic.de](http://www.iml-electronic.de)

## wiring diagram Dosistar V, version 3.7


|     |          |   |         |
|-----|----------|---|---------|
| 1.  | not used |   |         |
| 2.  | not used |   |         |
| 3.  | not used |   |         |
| 4.  | not used |   |         |
| 5.  | input:   | Pick-Up- sensor/switch (+12V...24V: pump on; 0V pump off) |         |
| 6.  | output:  | supply voltage for Pick-Up-switch (+12V-24V; 50mA)        |         |
| 7.  | output:  | pump minus  |         |
| 8.  | output:  | pump plus   |         |
| 9.  | input:   | device supply voltage (from battery)                      | - minus |
| 10. | input:   | device supply voltage (from battery)                      | - plus  |



1 2 3 4 5 6 7 8 9 10

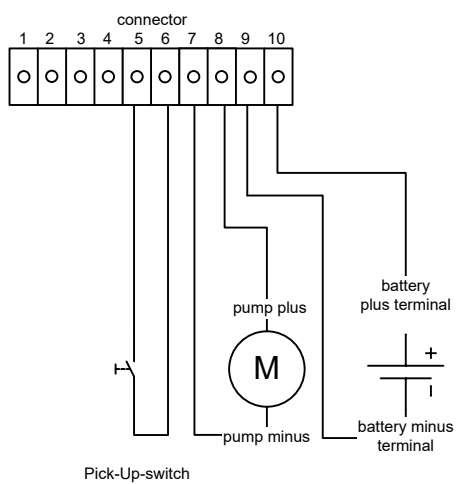

wiring diagram A

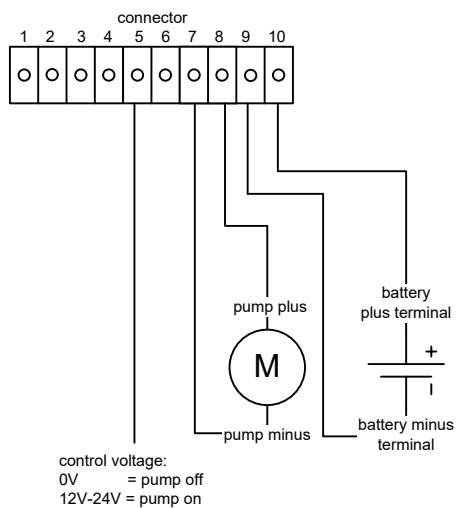

wiring diagram B



With Passion and  
Precision

IML Electronic GmbH  
Erich-Schlesinger-Straße 49D  
18059 Rostock | Germany

Telefon: +49 0381 – 49681440

E-Mail: [contact@iml-electronic.de](mailto:contact@iml-electronic.de)  
Web: [www.iml-electronic.de](http://www.iml-electronic.de)